



 
# RAYZR MC

## Multi-Color LED PANELS


- 1 SETTING UP
- 2 FUNCTIONS
- 3 WHAT IS IN THE BOX

## Mounting

- > Mount the light on a light stand with the installed TVMP receptacle. The receptacle offers two ways to mount the light to a light stand.

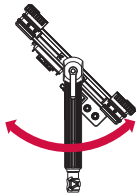

Position 1

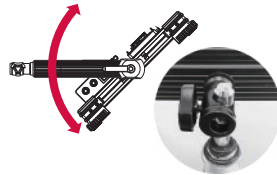 


Position 2

## Powering

 - > The light can be powered by:  
1xV-Mount battery / AC adapter through XLR-4 connector.

### Power Switch



- |          |             |             |              |
|----------|-------------|-------------|--------------|
| > MC 100 | ● 14.8 V DC | ○ 14.4 V DC | ● 12-24 V DC |
| > MC 120 | ● 14.8 V DC | ○ 14.4 V DC | ● 12-24 V DC |
| > MC 200 | ● 14.8 V DC | —           | ● 12-24 V DC |

● Standard ○ Optional — Not available


## Tilting

 - > The tilt position of the light can be adjusted by the high strength tilt lock lever, which can be repositioned by pulling and turning it (lift & lock).



## DMX (only models including DMX)

- > Connect a standard DMX console by the XLR 3-pin connector.

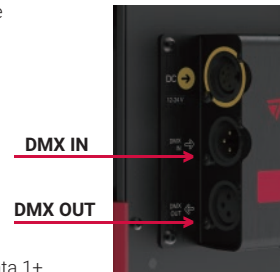

Pin 1: Ground Pin 2: Data 1- Pin 3: Data 1+

### Mode Selection | <MENU> & <↑><↓>

- > Start in the main menu interface.  
From other interface pages press <MENU> to return to the main menu.
- > **Select Mode:** Press <↑><↓> to move the cursor to select the mode or setting menu.
- > **Enter Mode:** Press <MENU> to enter the selected mode or setting interface.

### Adjusting Parameters | <Adjustment Knob> & <↑><↓>

- > Enter a lighting mode or setting interface first:
- > **Select:** Press <↑><↓> to move the cursor to the parameter of choice.
- > **Adjust:** Turn top <Adjustment Knob> to quickly or bottom <Adjustment Knob> to slowly adjust the selected parameter.

Menu

Confirm / Return



Adjustment Knob Quick

Adjustment Knob Fine

### Presets | <MODE> + <1~4> & <1~4>

- > Four scene presets can be saved independently in each mode. Please enter one of the lighting mode operation interfaces first:
- > **Save:** To save the light parameters in the current mode to a preset, press and hold <SAVE> and press one of the preset number buttons <1> <2> <3> <4>.
- > **Recall:** To recall a saved preset in the current mode, press one of the saved preset number buttons <1> <2> <3> <4>.

MODEL	Rayzr MC 100	Rayzr MC 120	Rayzr MC 200
Light Body	●	●	●
Barndoors	●	●	●
AC Adapter & Cable	●	●	●

● Standard ○ Optional – Not available

Technical data and offerings are subject to change without notice.