

Aladdin FABRIC-LITE 200

The innovative new bi-color FABRIC-LITE, as the name implies, is completely flexible, foldable and offers great flexibility for transport. Mounting options for the FABRIC-LITE are virtually limitless, including all types of butterfly, overhead, wall and ceiling mounts, thanks to the integrated Velcro and grommets. The 3'x3' panel can be easily mounted on a Matthews frame or similar.

For stand-alone, use an optional Aladdin Frame and Diffuser (softbox with silver internal reflector) is available, converting the FABRIC-LITE into a 3'x3' soft light source that can be mounted on a light stand or attached to a lighting grid. Each 3x3-foot fabric panel can be used separately, or combined with others to create a light source as large as 12x12 feet (one Dimmer per Panel). The fixture offers high control over lighting. It is dimmable from 100-0% and the color temperature can be adjusted from 2900°K to 6300°K.

The Dimmer runs from main power supply or battery and has a built-in Lumen Radio module for DMX control. The included Dimmer features an integrated battery mount (Gold-Mount or V-Mount depending on the configuration ordered).

FEATURES:

- High CRI/TLCI: 98
- Variable Color 2900-6300K
- Stepless Dimming 100-0%
- DMX In/Out
- Built-in Lumen Radio
- Lightweight, Flexible, Foldable
- 200W Power
- AC or DC Power (Gold Mount or V-Mount Option)
- Modular Kits Available



Aladdin




SPECIFICATIONS

Light Source	Super High CRI Power LED's 200W
CRI	CRI 98 / TLCI 98
Color Temperature	2900K-6300K
Beam Angle	140°
Dimmer	Dimming: (1%–100%)
Cooling	Passive Cooling
Dimmer Input	12V to 30V
Power Unit	Automatic Voltage 100V to 240V

PHOTOMETRICS

	60cm/2ft	1m/3ft	2m/6ft	3m/9ft	CRI
Daylight 6300K	8300lux	4200lux	1300lux	640lux	97
Bi-Color 4200K	9000lux	4500lux	1400lux	700lux	97
Tungsten 2900K	6800lux	3400lux	970lux	520lux	98

ACCESSORIES

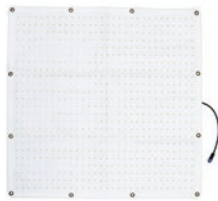

FBS350BI




FBS2035BIFBAG



FBS2035BIBAG



FBS2035FR

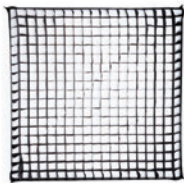

FBS2035GRID



FBS2035DF



BUNGEEBALLPACK



FB200BIDIMVM