

Aladdin MOSAIC-LITES

Big, bright, and portable LED production lighting is here from Aladdin. The MOSAIC foldable LED lights are available in large footprints of 2X4 (350W), 4X4 (600W) and 3X6 (600W) fabric panels. The innovative and foldable design creates endless mounting options for the Aladdin MOSAIC-LITE. Use the included frame or fly the product from any custom rig or existing grip frames. These RGBWW lights have superior color rendering with a CRI and TLCI index over 95.


A variety of operational control is at your fingertips for the Mosaic panels. Basic control can be done with the hard wired buttons built into the back of each panel or more sophisticated control can be done via the Aladdin mobile app, or with the MOSAIC Wired Dimmer (M-WDIM) providing a 5-pin DMX port and wireless LumenRadio functionality. Built in filters and effects are integral in both the app and wired controller, an indispensable tool for production workflow.

The kit includes almost everything you need to get shooting. The frame, softbox, grid, wired remote, extension cables and power supply all fit into the 1.5' x 4.5' rolling waterproof hard case.

A unique feature of the Mosaic panels are the changeable LED tiles on these panels. If any individual LEDs fail, the Mosaic is designed to exchange individual tiles on the panel with simple hand tools. These panels can be repaired locally without the need to endure long wait times back to the manufacturer or dealer. Your personal equipment and rentals can be back in operation quickly. Aladdin designs innovative products by listening to their user's feedback. We strive to help our customers be at their most creative potential by building the finest lighting tools for television, video, and motion picture production.

FEATURES:


- Flexible
- Portable
- Large Footprint
- High Footcandle Output
- High CRI / TLCI
- RGBWW
- Field Repairable

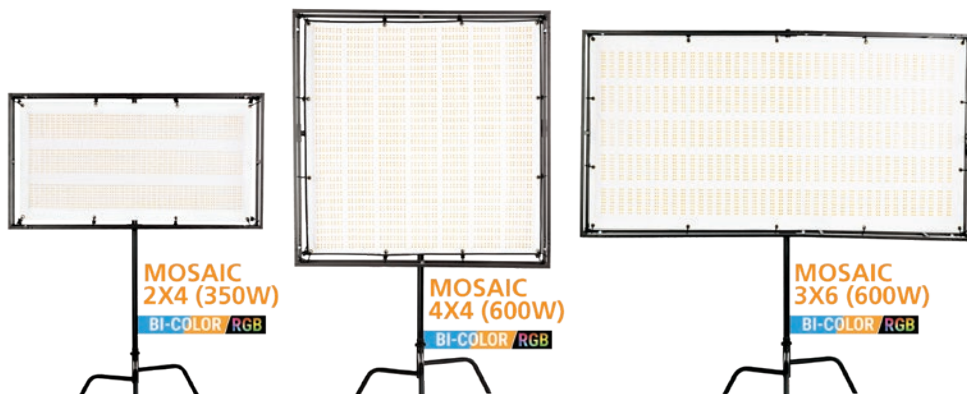

MOSAIC 2X4 SPECIFICATIONS



PHOTOMETRIC

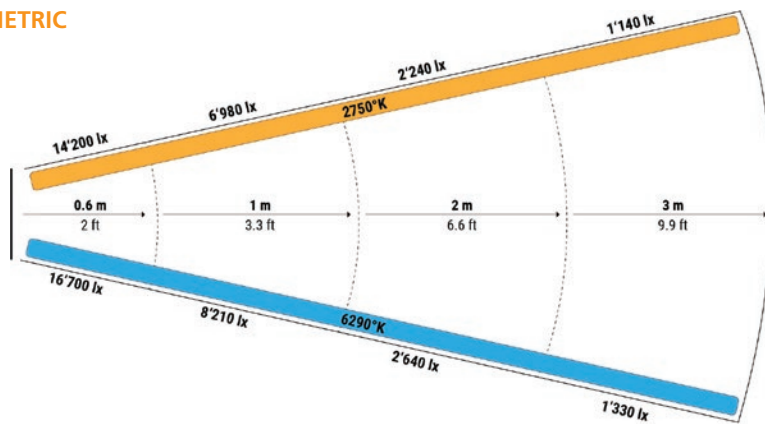

MOSAIC 2X4 350W RGBWW


Light Source	350W Daylight / 350W Tungsten / 250W RGB
CRI	CRI 95 / TLCI 95
Color Temperature	2900°K - 6100°K
Beam Angle	140°
Dimensions Panel Only	21.6" X 43.3" / Folded: 15.8" X 19.7" / 4.8lbs
Dimensions Frame	26.8" X 43.3" X 6.7" / 7.9lbs
Full Kit In Case	17.7" X 53.5" X 7.5" / 37.5lbs
Input AC/DC	100-240V / 48V
DMX	DMX / LumenRadio / Bluetooth
Dimming	1-100%

MOSAIC 2X4 350W RGBWW Full Kit


Item Number	1005372
Part Number	M2X4-KIT
Inside the Box	1 x M2X4-PANEL, 1x M350-ACAD, 1x M350-ACADH, 1x M3560-EXCA5M, 2x M3560-EXCA3M, 1x M2X4-FR, 1x M2X4-DF, 1x M2X4-GRID, 1x M-BAG, 1x M-WDIM, 1x INNERBAG-S, 16x Aladdin CUBE

* All Mosaic Kits include Panel, Wired Dimmer with DMX & Lumen Radio, Frame, Diffusor, Grid, AC-DC Power Supply, Power Supply Holder, 3m Cable, 5m Cable, Panel Bag, and Molded Polypropylene Travel Case.

MOSAIC 4X4 SPECIFICATIONS

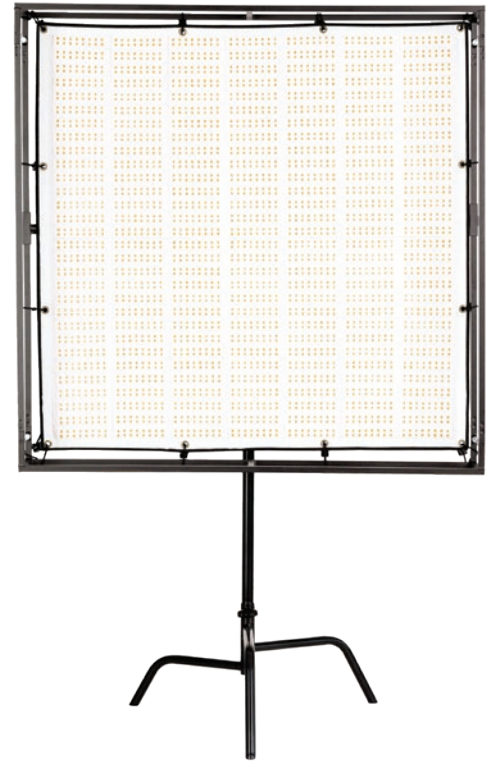

PHOTOMETRIC

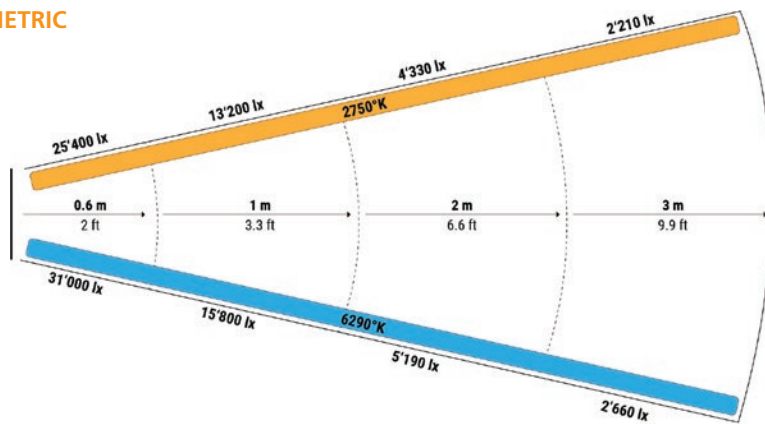

MOSAIC 4X4 600W RGBWW

Light Source	600W Daylight / 600W Tungsten / 420W RGB
CRI	CRI 95 / TLCI 95
Color Temperature	2900°K - 6100°K
Beam Angle	140°
Dimensions Panel Only	43.3" X 43.3" / Folded: 15.8" X 19.7" / 8.8lbs
Dimensions Frame	45.3" X 45.6" X 6.7" / 9.9lbs
Full Kit In Case	17.7" X 53.5" X 7.5" / 45.2lbs
Input AC/DC	100-240V / 48V
DMX	DMX / LumenRadio / Bluetooth
Dimming	1-100%

MOSAIC 4X4 600W RGBWW Full Kit


Item Number	1005373
Part Number	M4X4-KIT
Inside the Box	1 x M4X4-PANEL, 1x M600-ACAD, 1x M600-ACADH, 1x M3560-EXCA5M, 1x M3560-EXCA3M, 1x M4X4-FR, 1x M4X4-DF, 1x M4X4-GRID, 1x M-BAG, 1x M-WDIM, 2x INNERBAG-S, 16x ALADDIN CUBE

* All Mosaic Kits include Panel, Wired Dimmer with DMX & Lumen Radio, Frame, Diffusor, Grid, AC-DC Power Supply, Power Supply Holder, 3m Cable, 5m Cable, Panel Bag, and Molded Polypropylene Travel Case.

MOSAIC 3X6 SPECIFICATIONS



PHOTOMETRIC

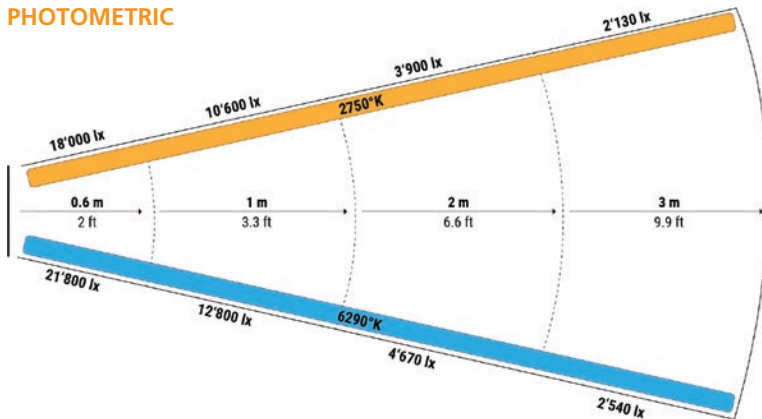

MOSAIC 3X6 600W RGBWW

Light Source	600W Daylight / 600W Tungsten / 420W RGB
CRI	CRI 95 / TLCI 95
Color Temperature	2900°K - 6100°K
Beam Angle	140°
Dimensions Panel Only	35.0" X 70.1" / Folded: 15.8" X 19.7" / 9.9lbs
Dimensions Frame	37.4" X 72.1" X 7.1" / 12.1lbs
Full Kit In Case	17.7" X 53.5" X 7.5" / 48.5lbs
Input AC/DC	100-240V / 48V
DMX	DMX / LumenRadio / Bluetooth
Dimming	1-100%

MOSAIC 3X6 600W RGBWW Full Kit

Item Number	1005379
Part Number	M3X6-KIT
Inside the Box	1 x M3X6-PANEL, 1x M600-ACAD, 1x M600-ACADH, 1x M3560-EXCA5M, 1x M3560-EXCA3M, 1x M3X6-FR, 1x M3X6-DF, 1x M3X6-GRID, 1x M-BAG, 1x M-WDIM, 2x INNERBAG-S, 18x ALADDIN CUBE

* All Mosaic Kits include Panel, Wired Dimmer with DMX & Lumen Radio, Frame, Diffusor, Grid, AC-DC Power Supply, Power Supply Holder, 3m Cable, 5m Cable, Panel Bag, and Molded Polypropylene Travel Case.