

# Aladdin MOSAIC TUBE

The MOSAIC TUBE represents a groundbreaking development in flexible LED lighting technology. Inflatable and ready to shine within minutes, it introduces an innovative approach to lighting setups. A key advantage of the MOSAIC TUBE Lights is their feather-light structure. Weighing significantly less than traditional lighting gear, these Tubes facilitate easy transportation and installation without sacrificing performance or quality.

The innovative foldable design, creates endless mounting options for the Aladdin MOSAIC TUBE. Say goodbye to intricate rigging and bulky installations. The MOSAIC TUBE Lights have been engineered with simplicity at the forefront. Their intuitive mounting system allows for secure attachment to a variety of surfaces, including tripods, light stands, or even overhead frameworks. Adjusting the Tubes' placement is effortless, providing you with the flexibility to adapt swiftly and capture breathtaking imagery hassle-free.

With the MOSAIC TUBE Lights, the possibilities are endless. Whether you're filming indoors or outdoors, shooting a movie, a music video, or conducting a photography session, these Tubes are versatile enough to meet your needs. Take your filmmaking endeavors to new heights with the MOSAIC TUBE Lights, and unlock unprecedented levels of creative expression!

All MOSAIC-LITES are RGBWW panels, have a CRI and TLCI over 95 and offer Bluetooth connection to adjust them with the free Aladdin app right from your phone. The MOSAIC plug connection allows you to use gear like the MOSAIC Wired Dimmer (M-WDIM). The dimmer with display offers you physical dialing, a DMX port and built-in Lumen Radio. Our Mosaic Tubes are available as a comprehensive kit that includes a variety of accessories like a grid, air pump, and dimmer.

The MOSAIC-LITES utilize the fast changeable LED tiles allowing for field repair without replacing the whole panel. You can either have the LED tiles repaired by one of our certified dealers or if you have the technical skill to do so, you can field repair the LED tiles yourself in a matter of minutes. Aladdin provides a step by step DIY tutorial video on how to change the LED tiles on your own.


## FEATURES:

- Portable
- Flexible
- High Foot-candle/Lux Output
- High CRI / TLCI
- RGBWW
- Plus / Minus Green White Balance
- Lumen Radio Control
- Bluetooth App Control
- Field Repairable
- Built-in Filters
- Built-in Special Effects



# MOSAIC TUBE 4 SPECIFICATIONS

## PHOTOMETRIC

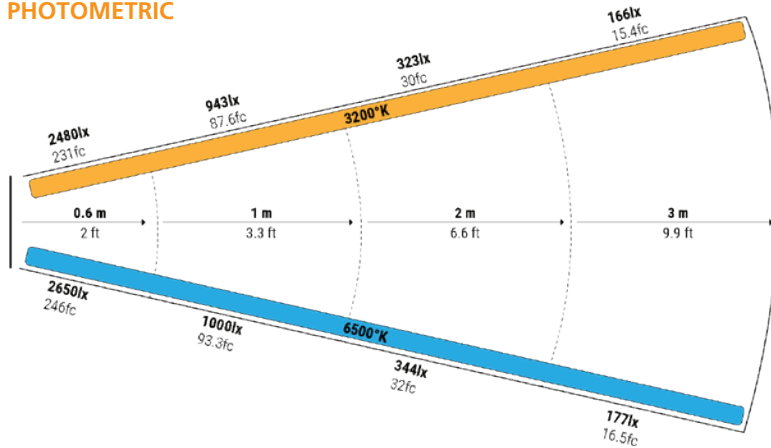


## MOSAIC TUBE 4 100W RGBWW

Light Source	100W RGBWW
CRI	CRI 95 / TLCI 95
Color Temperature	2200°K - 12000°K
Beam Angle	140°
Input AC/DC	100-240V / 14.8V
DMX	DMX / Lumen Radio / Bluetooth
Dimming	1-100%
Size	4ft
LED Panel Weight	1kg / 2.2lbs
AIR TUBE 4 Weight	1kg / 2.2lbs

# MOSAIC TUBE 8 SPECIFICATIONS

## PHOTOMETRIC

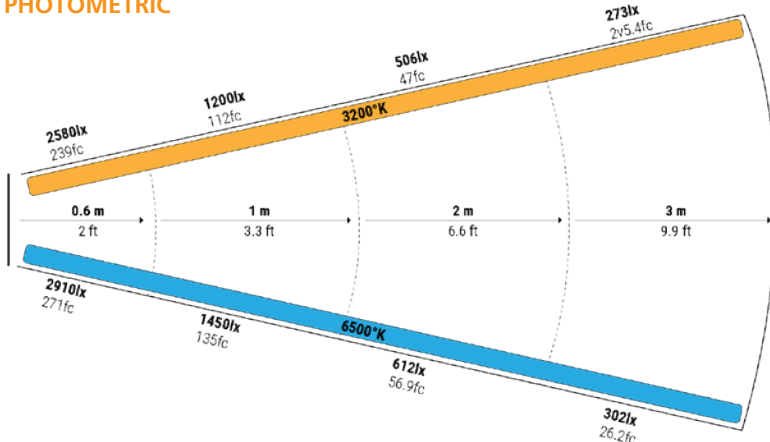

## MOSAIC TUBE 8 200W RGBWW

Light Source	200W RGBWW
CRI	CRI 95 / TLCI 95
Color Temperature	2200°K - 12000°K
Beam Angle	140°
Input AC/DC	100-240V / 14.8V
DMX	DMX / Lumen Radio / Bluetooth
Dimming	1-100%
Size	8ft
LED Panel Weight	2kg / 4.4lbs
AIR TUBE 8 Weight	2.3kg / 5.1lbs

# KITS AND ACCESSORY

MOSAIC TUBE 4 100W RGBWW Kit	
Item Number	1005474
Part Number	MT4-KITCVM
Inside the Box	1 x RGBWW LED Panel, 1 x AIR TUBE & Skirt, 1 x Mounting Plate, 1 x Stand Adapter, 1 x Stand Adapter Knob, 1 x Extension Power Cable, 1 x Dimmer Extension Cable, 1 x Wired Dimmer (WDIM) with Lumen Radio & Bluetooth, 1 x V-Lock Battery Plate, 1 x AC Adapter, 1 x AIR Pump, 1 x Case, 1 x Dust Bag for Tube 4, 1 x Inner Bag - Small for Accessories

MOSAIC TUBE 8 200W RGBWW Kit	
Item Number	1005475
Part Number	MT8-KITCVM
Inside the Box	1 x RGBWW LED Panel, 1 x AIR TUBE & Skirt, 1 x Mounting Plate, 1 x Stand Adapter, 1 x Stand Adapter Knob, 1 x Extension Power Cable, 1 x Dimmer Extension Cable, 1 x Wired Dimmer (WDIM) with Lumen Radio & Bluetooth, 1 x V-Lock Battery Plate, 1 x AC Adapter, 1 x AIR Pump, 1 x Case, 1 x Dust Bag for Tube 8, 1 x Inner Bag - Small for Accessories

Item Number	Part Number	MOSAIC-TUBE ACCESSORIES
TBD	M-WDIM	Wired Dimmer for MOSAIC