

AMALGAM TE CFL

TRIPLE TUBE COMPACT FLUORESCENT LAMPS

The energy-saving Amalgam TE compact fluorescent lamps perform better in higher temperature applications making them ideal for use in enclosed fixtures and applications with excessive heat. The USHIO Amalgam TE CFL lamps achieve 85-90% light output while operating at 150° F. These lamps contain less than 1mg of mercury. The Amalgam TE lamps are available in 26W Triple Tube versions. Color temperatures are available in 4100K.

Amalgam Technology: Amalgam is a mercury alloy which is an upgrade from traditional liquid and pellet dosing mercury. Since amalgam gives better mercury vapor control in the lamp these lamps perform better over a wider variety of temperatures and operating positions.



FEATURES & BENEFITS:


- Wide Operating Temperature Range Making Them Ideal for Higher Temperature or Enclosed Applications
- Universal Burn With Stable Light Output in All Burning Positions
- Low Mercury - Less Than 1Mg of Mercury Per Lamp
- Long Life - 12,500 Hour Commercial Life
- High Efficacy - 67 Lumens Per Watt

APPLICATIONS:

Enclosed Fixtures Where High Ambient Temperatures Are Expected:

- High Bay Lighting
- Outdoor Lighting
- Recessed Lighting
- Display Case and Cabinet Lighting

Stabilized Output vs. Ambient Temperature

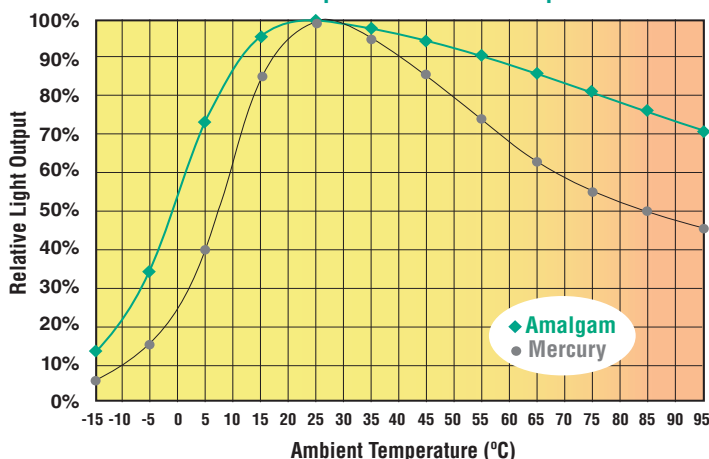

Case Quantity: 50

Watts (W)	Ordering Code	Lamp Description	Base	Volts (V)	Lamp Current (A)	Dimensions		Color Temp (K)	CRI	Luminous Flux		Average Rated Life* (h)	Commercial Life** (h)
						MOL (mm)	MOL (in)			Nom. (lm)	Min. (lm)		
AMALGAM TE Triple Tube 4-Pin Base for Electronic Ballasts													
26	3000533	CF26TE/841A	GX24q-3	105	0.325	131	5.2	4100	82	1800	1620	10000	12500

* Based on ANSI / IESNA standards of 3 hours per start

** Based on estimated commercial operating standards of 12 hours per start

All dimensions shown in inches unless otherwise noted.


Discontinued - For Reference Only

CAUTION: Amalgam CFL lamps may not be compatible with all dimming systems and applications. Please consult the dimmer manufacturer for compatibility.


contains mercury
contient du mercure



Manage in Accord with Disposal Laws
www.lamprecycle.org 1-800-895-8842

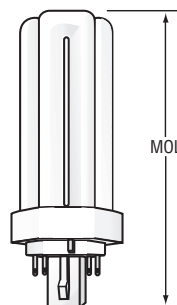

4-Pin Base



GX24q-3

