



Ceramique™ Metal Halide

Compact Ceramic Metal Halide Lamp

USHIO Ceramique Compact Metal Halide lamps feature a ceramic arc tube which provides excellent color rendering and high color stability over the entire life of the lamp. The UV protected glass envelope reduces the fading effect on textiles and artwork. The compact lamp size optimizes the use of advanced reflector and fixture designs to provide more precise beam distributions.

Available in 70W Single-Ended G12 Base with 3000K color temperature, the USHIO Ceramique lamps are ideal for applications where color rendering and color consistency from lamp to lamp is critical.


FEATURES & BENEFITS

- Excellent Color Consistency from Lamp to Lamp
- High Color Stability Over the Entire Lifetime
- Hot re-strike possible with RX7s baselamps
- Long Life - Up to 15,000 Hours Average Life
- UV Protection

APPLICATIONS

- Shop Windows
- Hotels
- Restaurants
- Museums
- Galleries
- Swimming Pools
- Landscape
- Spot Lighting
- Fiber Optic
- Track Lighting

SPECIFICATIONS

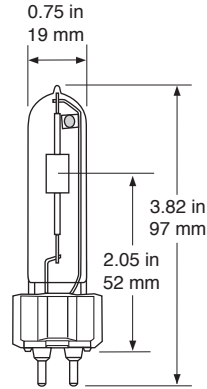

**T6
G12 Base**

Watts (W)	Ordering Code	Lamp Description	Lamp Current (A)	Color Temp (K)	CRI	Lumens		Burn Position	Avg Life (h)	ANSI Ballast / Fixture	Case Qty
						Initial (lm)	Mean (lm)				
CERAMIQUE™ Single-Ended – G12 Base											
70	5001321	CMS-70/T6/830/G12	0.98	3000	80+	6200	5000	Universal	15000	M85/E, M98/E, M139/E	12

Discontinued - For Reference Only

ANSI Fixture Requirement:

/E = Enclosed fixture required
UVB & UVC protected

Ignition Voltage: 4kV

Use only in fixtures installed with safety glass
Lamp should be switched off for at least 15 minutes/week

R - NON SELF-EXTINGUISHING LAMP

WARNING: This lamp can cause serious skin burn and eye inflammation from shortwave ultraviolet radiation if outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available. Complies with the USA Federal Standard 21 CFR 1040.30 and Canada Standard SOR/80-381.

⚠ CALIFORNIA PROPOSITION 65 WARNING: These products can expose you to Mercury known to the state of California to cause birth defects or other reproductive harm. For more information, please go to: www.p65warnings.ca.gov

contains mercury
contient du mercure



Manage in Accord with Disposal Laws
www.lamprecycle.org 1-800-895-8842