



# COOL BLACK SERIES



## Standard and Affordable Batteries with Enhanced Features

The Cool Black Series features V-Mount / Gold-Mount batteries with a simple 5-level status indicator which shows you the capacity level.

USB-A and D-TAP Outputs give you more than just one option to power your equipment. The battery can be charged and discharged over D-TAP and the V-Mount pins.

It has a built in protection-circuit – as all our batteries do – that protects the battery and used electronic equipment against over-heating, over-charge and over-discharge. The battery is chargeable and can be used in temperatures ranging from -20°C~ +55°C with a Maximum loss in sub zero temperatures of half the capacity.

With capacities ranging from 100Wh to 250Wh you can choose what fits your needs.

## FEATURES:

- 100Wh to 250Wh Capacity; 12A to 18A Output
- Internal Cell Protection & Protective Rubber Casing
- PCB Design: Over-Heat, Over-Charge, Over-Discharge, and Over-Current Protection
- Compatible with most V-Lock, D-Tap, and Gold-Mount Chargers
- 1x USB-A and 2x D-Tap Ports

## APPLICATIONS:

- Cameras
- Monitors / Recorders
- Lights



# SPECIFICATIONS



## New Design

Rubber Corners and 5-Level Capacity Indicator

## Plugs


1 x USB-A Output  
2 x D-Tap Input / Output

## Aluminum V-Lock Plate



## Gold-Mount



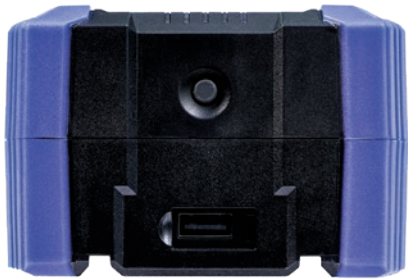

USB-A Output



2.1 Pin Socket

## 130Wh COOL BLACK BATTERY

<b>Mounting</b>	<b>Part Number</b>	<b>Item Number</b>
V-Mount	BP-130S	1004402
Gold-Mount	AN-130A	1004398
<b>Capacity</b>	14.4V/9.0Ah, 130Wh	
<b>Current</b>	12A (Max.)	
<b>D-Tap Output (2X)</b>	14.4V/12A (Max.)	
<b>USB-A Output</b>	5V/2A, 9V/2A, 12V/1.5A	
<b>Dimensions</b>	V-Mount - 154mm (L) × 100mm (W) × 66mm (H) Gold-Mount - 154mm (L) × 100mm (W) × 69mm (H)	
<b>Weight</b>	V-Mount - 1125g Gold-Mount - 1105g	



## 150Wh COOL BLACK BATTERY

<b>Mounting</b>	<b>Part Number</b>	<b>Item Number</b>
V-Mount	BP-160S	1004403
Gold-Mount	AN-160A	1004766
<b>Capacity</b>	14.4V/10.4Ah, 150Wh	
<b>Current</b>	12A (Max.)	
<b>D-Tap Output (2X)</b>	14.4V/12A (Max.)	
<b>USB-A Output</b>	5V/2A, 9V/2A, 12V/1.5A	
<b>Dimensions</b>	V-Mount - 154mm (L) × 100mm (W) × 66mm (H) Gold-Mount - 154mm (L) × 100mm (W) × 69mm (H)	
<b>Weight</b>	V-Mount - 1125g Gold-Mount - 1105g	



# SPECIFICATIONS

## 184Wh COOL BLACK BATTERY

Mounting	Part Number	Item Number
V-Mount	BP-190S	1004404
Gold-Mount	AN-190A	1004399
<b>Capacity</b>	14.4V/12.8Ah, 184Wh	
<b>Current</b>	15A (Max.)	
<b>D-Tap Output (2X)</b>	14.4V/15A (Max.)	
<b>USB-A Output</b>	5V/2A, 9V/2A, 12V/1.5A	
<b>Dimensions</b>	V-Mount - 154mm (L) × 100mm (W) × 66mm (H) Gold-Mount - 154mm (L) × 100mm (W) × 69mm (H)	
<b>Weight</b>	V-Mount - 1155g Gold-Mount - 1135g	



## 251Wh COOL BLACK BATTERY

Mounting	Part Number	Item Number
V-Mount	BP-250S	1004405
Gold-Mount	AN-250A	1004400
<b>Capacity</b>	14.4V/17.4Ah, 251Wh	
<b>Current</b>	18A (Max.)	
<b>D-Tap Output (2X)</b>	14.4V/18A (Max.)	
<b>USB-A Output</b>	5V/2A, 9V/2A, 12V/1.5A	
<b>Dimensions</b>	V-Mount - 154mm (L) × 100mm (W) × 85mm (H) Gold-Mount - 154mm (L) × 100mm (W) × 88mm (H)	
<b>Weight</b>	V-Mount - 1580g Gold-Mount - 1563g	



**⚠ CALIFORNIA PROPOSITION 65 WARNING:** Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).