



HIGH POWER WATERPROOF BATTERY



A Workhorse Battery for High Power LED Lights

Introducing our revolutionary 14.4V / 559Wh high power waterproof battery, purpose-built for compatibility with up to 400W, 30A high-power equipment. Its rugged structural design, integrated shell and output terminal design achieves an unparalleled energy density ratio. This high power battery balances the highest Li-ion capacity within a remarkably practical size.

Safety is paramount, and this battery is equipped with a high-power intelligent protection chip, offering safeguards against overcharge, over-discharge, temperature fluctuations, and over-current scenarios. Additionally, it features an overload self-recovery design for added reliability.


With an IP54 waterproof rating and a robust 30A high-power discharger, it perfectly meets the tough demands of equipment like 300W+ LED lights, cameras, and film and television gear that can directly utilize portable V-mount batteries.

FEATURES:

- Working Current up to 30A
- Two D-Tap Inputs/Outputs
- 5-Level Capacity Indicator
- IP54 Waterproof
- Shock Absorbing Case
- Smart Protection Circuit (Short-Circuit, Over-Charge, Over-Discharge)

SPECIFICATIONS:

| | |
|--------------------------|---|
| Item Number | 1005521 |
| Part Number | BP-HP600 |
| Mounting | V-Mount |
| Capacity | 38.8Ah, 559Wh |
| Voltage | 14.4V |
| Battery Output | 14.4V / 30A (400W) |
| D-Tap Output (2X) | 14.4V / 10A |
| IP Rating | IP54 |
| Dimensions | 161.7mm (L) x 104.7mm (W) x 105.5mm (H) 6.37in (L) x 4.12in (W) x 4.15in (H) |
| Weight | 2784g / 6.14lb |

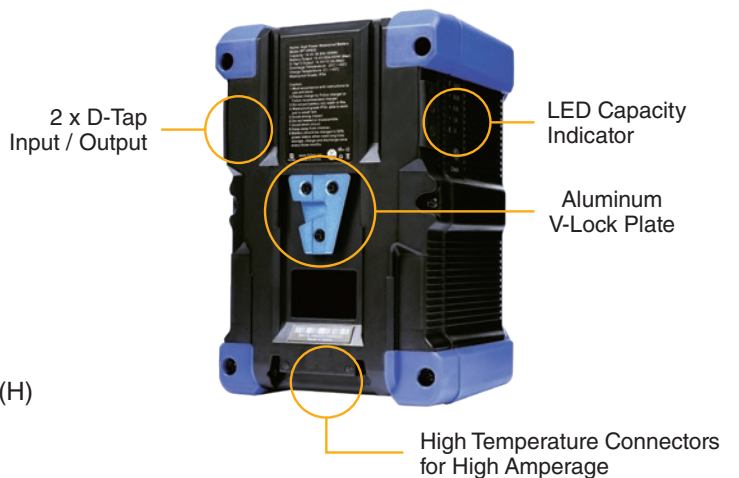

⚠ CALIFORNIA PROPOSITION 65 WARNING: Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Contact your Zylight dealer at www.zylight.com | zylightsales@ushio.com | 800.838.7446

Refer to website for product availability, compliance, and regulations. Specifications may be subject to change without prior notice.
Form No. S- HP Waterproof Battery/0524

