

SKY THREE



48V V-Mount Portable Power Adapter

The SKY THREE offers you 48V high power output for big LED lights up to 1000W. You can either use four 14.8V batteries to get a maximum output of 48V/750W or four 26V batteries to get a maximum output of 48V/1000W*. The SKY THREE auto-identifies the incoming voltage. Please note, you can not mix 14.8V & 26V batteries with this device. If you are using two 14.8V or two 26V batteries alone, you will get a maximum output of 48V/480W. This power solution has protecting rubber corners and offers an incredibly compact and portable design. The package includes a steel cable to hang the SKY THREE on a stand or mount it directly to a light fixture.



FEATURES AND ADVANTAGES:

- 48V/1000W Portable Power Adapter for High Power LED Lights
- Compatible with Two Types of Battery Voltages:
 - 14.8V x 4pcs = Output 48V/750W(Max)
 - 26V x 4pcs = Output 48V/1000W(Max)
- powerCon Out - Various End-Type Cables Available

APPLICATIONS:

SKY THREE is the perfect Companion for Lights such as:


- ARRI Orbiter & Skypanel
- Creamsource Vortex8
- Lightstar
- And Many More



*Please note, you can not mix 14.8V & 26V batteries with this device.

SPECIFICATIONS

Four Channel V-Lock Mount

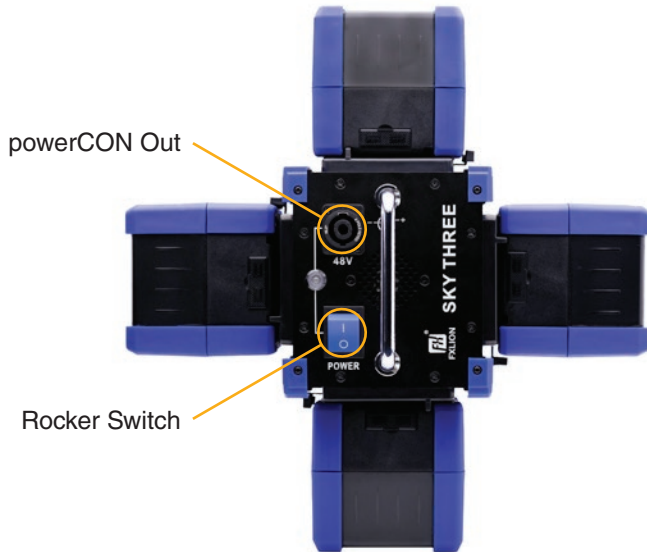

SKYTHREE - ITEM #1005324


The SKY THREE offers you 48V high power output for big LED lights. You can either use four 14.8V batteries to get a maximum output of 48V/750W or four 26V batteries to get a maximum output of 48V/1000W*.

DC- Input	14.8V x 4 (batteries) 26V x 4 (batteries)
DC-Output	48V / 750W (with 4 x 14.8V batteries) 48V / 1000W (with 4 x 26V batteries)
Dimensions	178(L)mm*162(W)mm*181(H)mm
Weight	2260g
Sockets	48V Output - Neutrik powerCON NL2FX

*Please note, you can not mix 14.8V & 26V batteries with this device.

Recommended FXLION Batteries:

BP-M300 V-Mount 14.8V, 300Wh, 20.4Ah, 18A Max Current, Lithium-Ion Battery
BP-7S270 V-Mount 26V, 270Wh, 10.5Ah, 15A Max Current, Lithium-Ion Battery

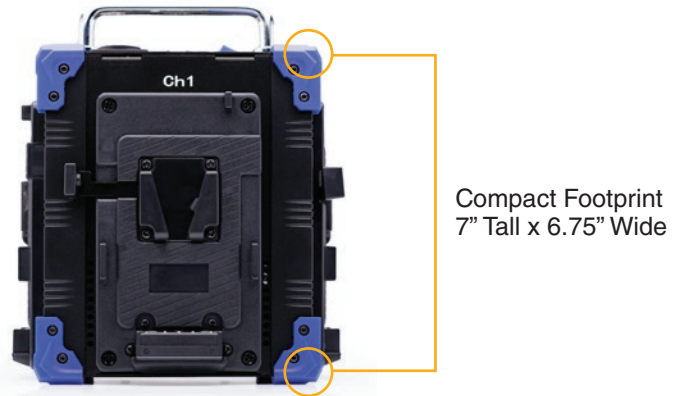

⚠ CALIFORNIA PROPOSITION 65 WARNING: Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.