

SKY TWO



48V / 24V DC Output Adapter V-Mount

The SKY TWO offers you 24V and 48V powering options with 14.8V or 26V V-mount batteries. You can either use two 14.8V, two 26V or one of each at the same time (Bi-Voltage). The SKY TWO 24V/48V auto identifies the incoming voltage of your batteries. Each combination of batteries will offer you different maximum outputs (see technical info below). The SKY TWO can for example power your 24V Arri cine camera or powerful 48V LED lights. The maximum output can be achieved with two 26V batteries, giving you a total output of 48V with 480W. The SKY TWO has a compact design and rubber corners for maximum protection. The package includes a steel cable to hang the device on a stand or mount it directly to a light fixture.

FEATURES AND ADVANTAGES:

- Input: 14.8V or 26V Batteries
- Selectable 24V or 48V DC Output
- Compact Size
- Protective Rubber Corners
- Steel Cable for Stand Mounting
- 3-Pin XLR Out
- V-Mount Plates
- ¼-20 thread for optional mounting
- V-Mount or Gold Mount Models

APPLICATIONS:

SKY TWO is the perfect Companion for Lights such as:

- ARRI Orbiter & Skypanel
- Creamsource Vortex8
- Lightstar
- Zylight F8-200

SPECIFICATIONS & ACCESSORIES



Hooks for Cable Hanging

1/4-20 Thread

SKY TWO V-MOUNT - ITEM #1005364

DC- Input 14.8V x 2 to DC output: 24V/360W(max) or 48V/400W(max)


26V x 2 to DC output: 24V/360W(max) or 48V/480W(max)

14.8V x 1+26V x 1 to DC output: 24V/360W(max) or 48V/400W(max)

Dimensions 116(L)mm*96(W)mm*168(H)mm


Weight 1023g/2.2lbs

Sockets 24V Output: 3-Pin Female XLR socket
48V Output: 3-Pin Female XLR socket

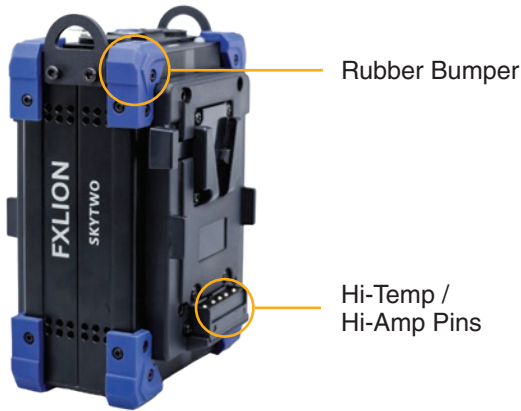

Rubber Bumper

Hi-Temp / Hi-Amp Pins

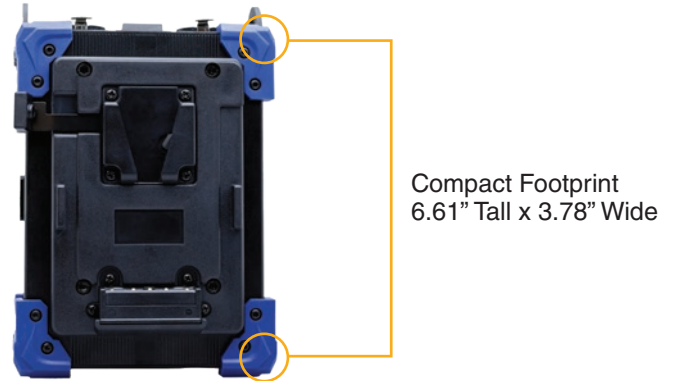

Compact Footprint
6.61" Tall x 3.78" Wide

ACCESSORIES

Part Number	Item Number	Description	
DC-24LR	1004803	Skypower DC Cable DC-24LR	24V Skypower and Mega Battery DC Cable. 3pin XLR Male to NEUTRIK Connector to Power Dedo LedRama.
DC-48AR	1004410	Skypower DC Cable DC-48AR	48V Skypower and Mega Battery DC Cable. 3pin Male to 3pin Female for Arri Skypanel S30, S60, S120 and Other Lights. Pin 1 Negative, Pin 2 Positive
DC-3M-30H	1004801	Skypower DC Cable DC-3M-30H	24V Skypower and Mega Battery DC Cable. 3pin XLR Male to 4pin XLR Female for 24V Skypower and Mega Battery Units to Power LED Lights.
DC-24ALD	1004409	Skypower DC Cable DC-24ALD	24V Skypower and Mega Battery DC Cable. 3pin XLR Male to CHOGORI Connector to Power Aladdin 100W and 200W Flexible Lights.
DC-48ALD	1004802	Skypower DC Cable DC-48ALD	48V Skypower and Mega Battery DC Cable. 3pin XLR Male to CHOGORI Connector to Power Aladdin 48V Light.

⚠ CALIFORNIA PROPOSITION 65 WARNING: Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.