



JCS 575W Halogen Lamps for Entertainment Lighting

The 575 watt Halogen lamps from USHIO are designed as a medium wattage alternative to the FKW 300W and FRK 650W lamps used in theatrical fresnels. These medium wattage lamps allow for two instruments to be used on a 1200 watt capacity dimming channel while maximizing the light output. The Halogen capsule utilizes a bi-plane filament design, and incorporates a special gas mixture to prevent overheating and lamp darkening in smaller and hotter instrument designs.


Available in 300 hour life at 15,500 lumens; and Long life 1500 hour at 12,000 lumens.



**Acclaim Fresnel
Selecon Performance Lighting**

FEATURES & BENEFITS

- Excellent Color Consistency From Lamp to Lamp
- High Color Stability Over the Entire Lifetime
- 26 Lumens Per Watt
- Permits 2 Fixtures Per Circuit
- Bi-Plane Filament
- GY9.5 Base

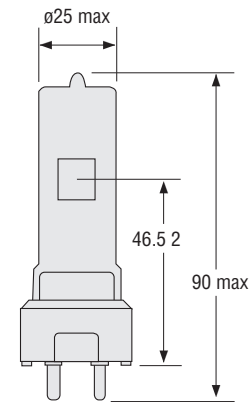

GY9.5 Base

Case Quantity: 10

Watts (W)	Ordering Code	Lamp Description	Bulb Finish	Filament Type	Volts (V)	Color Temp (K)	Approx Lumens (lm)	Avg Rated Life (h)
575	1003326	JCS120V-575WC	Clear	8-C-13D	120	3200	15500	300
575	1003327	JCS120V-575WX	Clear	8-C-13D	120	3200	12000	1500

All dimensions shown in millimeters unless otherwise noted.