

Eurostar™ Refleкто™ MR1 1



MR11 Aluminized Reflector Lamps

Eurostar™ Refleкто™ series of Halogen MR11 lamps provide professional accent lighting without light back-spill. The Eurostar Refleкто combines an aluminum deposition and a high temperature colored coating on the reflector to prevent any back-spill of light and to reduce heat to the back of the lamp. The aluminized coating redirects heat through the front of the lamp, thus diminishing the risk of thermal damage to sockets, transformers, and ceilings. The Eurostar MR11 Refleкто is offered in clear and two designer colors of matte black and silver - ideal for low voltage cable and track lighting.

Available in 20W and 35W; Spot and Flood beam spreads.



Dimmable

FEATURES & BENEFITS

- No Light Diffusion from Back-Spill
- Reduced Heat to Socket, Fixture and Transformers
- 80% Reduction of IR to the Back of the Lamp
- Decorative Aluminum Coating in Clear and Matte Colors Black and Silver
- Axial Filament for Precise Beam Control
- Dimmable
- Crisp White Halogen Light
- UV-Cut Halogen Capsule
- Flush Fitting Integral Front Glass


APPLICATIONS

- Accent Lighting
- Restaurants
- Museums and Galleries
- Shop Windows, Displays
- Track and Cable Lighting
- Showcase Lighting




Eurostar™ Refleкто™ lamps are manufactured under ISO 9001 guidelines ensuring quality and security for the purchaser.

SPECIFICATIONS

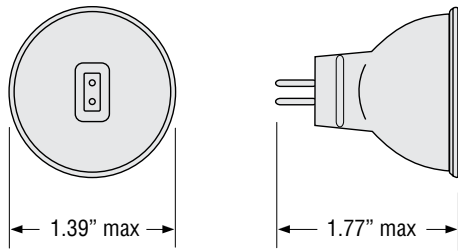

GU4 Base

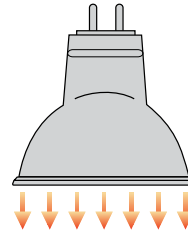

The aluminum coating of the reflector ensures lower heat radiation to the rear of the lamp.

ø(ft)	H(ft)	E(fc)
0.69	3.3	148.92
1.38	6.6	36.97
2.10	9.8	16.91
2.79	13.1	8.92
12°	MR11 Reflektó	20W

ø(ft)	H(ft)	E(fc)
2.13	3.3	46.20
4.26	6.6	11.98
6.40	9.8	4.92
8.53	13.1	2.97
36°	MR11 Reflektó	20W

ø(ft)	H(ft)	E(fc)
2.13	3.3	97.92
4.26	6.6	23.97
6.40	9.8	10.96
8.53	13.1	5.95
36°	MR11 Reflektó	35W

Case Quantity: 50

Watts (W)	Ordering Code	Lamp Description	Volts (V)	Color Temp (K)	Beam Angle	Beam Spread	Luminous Intensity (cd)	Reflector Color Coating	Average Rated Life (h)
EUROSTAR™ REFLEKTO™ MR11, 12V Miniature, 2-Pin Base									
20	1003344	20MR11/SP12/A/FG	12	2900	12°	Spot	1600	Clear	1500
20	1003345	20MR11/FL36/A/FG	12	2900	36°	Flood	500	Clear	1500
20	1003348	20MR11/SP12/B/FG	12	2900	12°	Spot	1600	Black	1500
20	1003352	20MR11/SP12/S/FG	12	2900	12°	Spot	1600	Silver	1500
35	1003351	35MR11/FL36/B/FG	12	2900	36°	Flood	1050	Black	1500

All dimensions shown in inches unless otherwise noted.
Not compliant with California Title 20.