




Eurostar™ Reflekt™ MR16

MR16 Aluminized Reflector Lamps

Eurostar™ Reflekt™ lamps are made with an aluminum deposition to reduce process heat emission through the back of the lamp. These lamps are well suited for enclosed or recessed fixtures where there is a risk of thermal damage to sockets and transformers. Much like a PAR lamp, the aluminized coating reduces the back spill of light through the rear of the reflector.

Available in 35W and 50W; Spot, Narrow Flood, Flood, and Wide Flood beam spreads.

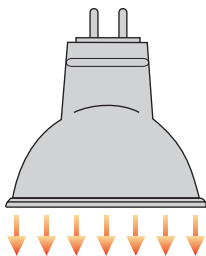

The aluminum coating of the reflector ensures lower heat radiation to the rear of the lamp.



Dimmable

FEATURES & BENEFITS

- Aluminized Coated Reflector
- Less Heat to the Back of the Lamp
- Consistent Color
- Axial Filament for Precise Beam Control
- Dimmable
- Crisp White Halogen Light
- UV-Cut Halogen Capsule
- Base Type GU5.3
- Universal Burn Position



APPLICATIONS

- Recessed Down Lights
- Museums and Galleries
- Accent Lighting
- Offices and Commercial Areas
- Wall Washing
- Restaurants
- Enclosed Fixtures
- Display Cabinets



Eurostar™ Reflekt™ lamps are manufactured under ISO 9001 guidelines ensuring quality and security for the purchaser.

SPECIFICATIONS

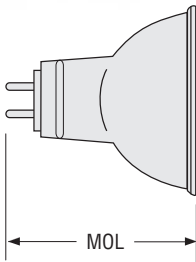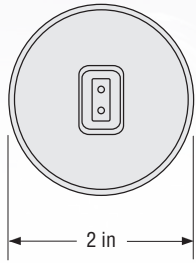

GU5.3 Base

Item 1000549

ø(ft)	H(ft)	E(fc)
0.69	3.3	557.40
1.38	6.6	139.35
2.10	9.8	61.96
2.79	13.1	34.84
12°		35W
FMT/C/A		

Item 1000550

ø(ft)	H(ft)	E(fc)
0.69	3.3	557.40
1.38	6.6	139.35
2.10	9.8	61.96
2.79	13.1	34.84
12°		35W
FMT/C/A/FG		

Item 1000556

ø(ft)	H(ft)	E(fc)
1.41	3.3	213.67
2.79	6.6	53.42
4.20	9.8	23.78
5.58	13.1	13.38
24°		35W
FMV/C/A		

Item 1001682

ø(ft)	H(ft)	E(fc)
3.77	3.3	47.38
7.58	6.6	11.89
11.35	9.8	5.30
15.15	13.1	2.97
60°		35W
FMW/60/C/A		

Item 1000417

ø(ft)	H(ft)	E(fc)
0.69	3.3	1021.90
1.38	6.6	255.48
2.10	9.8	113.52
2.79	13.1	63.92
12°		50W
EXT/C/A		

Item 1000428

ø(ft)	H(ft)	E(fc)
1.41	3.3	334.44
2.79	6.6	83.61
4.20	9.8	37.16
5.58	13.1	20.90
24°		50W
EXZ/C/A/FG		

Item 1000402

ø(ft)	H(ft)	E(fc)
2.13	3.3	185.80
4.26	6.6	46.45
6.40	9.8	20.62
8.53	13.1	11.61
36°		50W
EXN/C/A		

Item 1000590

ø(ft)	H(ft)	E(fc)
3.77	3.3	78.97
7.58	6.6	19.69
11.35	9.8	8.73
15.15	13.1	4.92
60°		50W
FNV/C/A		

Case Quantity: 50

Watts (W)	Ordering Code	Lamp Description	Volts (V)	MOL (in)	Color Temp (K)	Beam Angle	Beam Spread	CBCP (cd)	Avg Rated Life (h)
35	1000549	FMT/C/A, EUROSTAR-REFLEKTO	12	1.77	2950	12°	Spot	6000	3500
35	1000550	FMT/C/A/FG, EUROSTAR-REFLEKTO	12	1.78	2950	12°	Spot	6000	3500
35	1000556	FMV/C/A, EUROSTAR-REFLEKTO	12	1.77	2950	24°	Narrow Flood	2300	3500
35	1001682	FMW/60/C/A/F, EUROSTAR-REFLEKTO	12	1.77	2950	60°	Wide Flood	510	3500
50	1000417	EXT/C/A, EUROSTAR-REFLEKTO	12	1.77	3000	12°	Spot	11000	3500
50	1000428	EXZ/C/A/FG, EUROSTAR-REFLEKTO	12	1.78	3000	24°	Narrow Flood	3600	3500
50	1000402	EXN/C/A, EUROSTAR-REFLEKTO	12	1.77	3000	36°	Flood	2000	3500
50	1000590	FNV/C/A, EUROSTAR-REFLEKTO	12	1.77	3000	60°	Wide Flood	850	3500

All dimensions shown in inches unless otherwise noted.

Not compliant with California Title 20.
Discontinued - For Reference Only

⚠ CALIFORNIA PROPOSITION 65 WARNING: These products can expose you to chemicals including nickel, which are known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

