




Frostline™ Halogen MR16 Reflector

Frosted MR16 Lamps

The USHIO Frostline™ series of MR16 lamps feature a Halogen capsule surrounded by a frosted reflector and frosted front glass cover. Because there is no reflective coating on the reflector, the light profile spills in all directions. Normal dichroic MR16s typically cause color changes or disruptive patterns on colored fixture glass. The Frostline series was designed to fit into pendant glass fixtures and eliminate the back-spill of “dichroic color” often occurring when used in these type of fixtures.

Available in - 20W and 50W

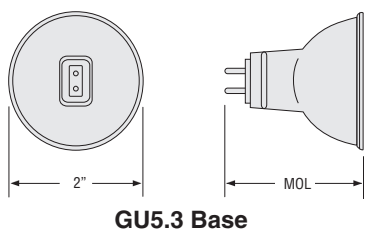

GU5.3 Base

FEATURES & BENEFITS

- Integrated Frosted Cover Glass
- Diffused Light
- Crisp Halogen Color
- Standard Bi-Pin GU5.3 Base
- 4000 Hours Average Life
- Dimmable
- A-Line Type Light Profile

APPLICATIONS

- Glass Pendant Lighting
- Decorative Lighting

Case Quantity: 50

Watts (W)	Ordering Code	Lamp Description	Voltage (V)	MOL (in)	Filament	Color Temp (K)	Luminous Flux (lm)	Avg Rated Life (h)
20	1003253	JR12V-20W/FR/FG	12	1.78	C-8	2900	250	4000
50	1003255	JR12V-50W/FR/FG	12	1.78	C-8	2950	850	4000

All dimensions shown in millimeters unless otherwise noted.

Not compliant with California Title 20.
Discontinued - For Reference Only



LAMP SOCKET

The model C-33U socket is rated up to 24V-7A for use with all low voltage USHIO GU5.3 based MR16 lamps. The metal clips secure the lamp firmly into the socket. Use Ordering Code 1002142.



Frostline™ lamps are manufactured under ISO 9001 guidelines ensuring quality and security for the purchaser.