




## Softline™ Halogen MR16 Reflector

Frosted Lamps with Frosted Front Glass

USHIO Softline™ series of MR16 lamps feature a frosted front glass cover. The frosted front glass cover reduces glare and evenly distributes white Halogen light without dark spots or striations. The UV protected Halogen capsule is computer aligned inside a Titanium Oxide coated reflector. The proper alignment of the filament and the reflector ensures a precise beam pattern. The hard Titanium Oxide surface provides consistent color throughout the life of the lamp. The USHIO Softline lamps are available in 20W, 35W, 50W and 75W.

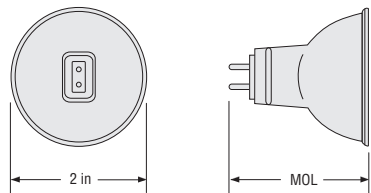

GU5.3 Base

### FEATURES & BENEFITS

- Reduces Glare
- Creates Soft Beam of White Halogen Light
- Integrated Frosted Cover Glass
- Consistent Color
- 4000 Hours Average Life
- Dimmable
- UV Protected
- Axial Filament

### APPLICATIONS

- Accent Lighting
- Museums and Galleries
- Decorative Lighting
- Restaurants
- Track Lighting
- Display Lighting

Case Quantity: 50

Watts (W)	Ordering Code	Lamp Description	Voltage (V)	MOL (in)	Color Temp (K)	Beam Angle	CBCP (cd)	Avg Rated Life (h)
20	1003284	JR12V-20W/FL30/FG/SFT	12	1.78	2950	30°	400	4000
35	1003285	JR12V-35W/FL30/FG/SFT	12	1.78	2950	30°	700	4000
50	1003286	JR12V-50W/FL30/FG/SFT	12	1.78	2950	30°	1200	4000

All dimensions shown in millimeters unless otherwise noted.

Not compliant with California Title 20.  
Discontinued - For Reference Only

ø(ft)	H(ft)	E(fc)	ø(ft)	H(ft)	E(fc)	ø(ft)	H(ft)	E(fc)
1.77	3.3	37.16	1.77	3.3	65.03	1.77	3.3	111.48
3.51	6.5	9.29	3.51	6.5	16.26	3.51	6.5	27.87
5.28	9.8	4.09	5.28	9.8	7.25	5.28	9.8	12.36
7.02	13.1	2.23	7.02	13.1	4.08	7.02	13.1	6.97
30° 20W JR12V-20W/FL30/FG/SFT			30° 35W JR12V-35W/FL30/FG/SFT			30° 50W JR12V-50W/FL30/FG/SFT		



Softline™ lamps are manufactured under ISO 9001 guidelines ensuring quality and security for the purchaser.