




# Ultraline™ Halogen MR16

## 10,000 Hour MR16 Reflector Lamps

The exceptional performance of the Ultraline™ MR16 reflector lamps are a result of our advancements in our filament design and gas fill technologies. Manufactured under ISO 9001 guidelines, refinements in the reflector coating process slows deterioration of the reflector, allowing Ultraline™ lamps to maintain their consistent Halogen color throughout the life of the lamp. Beware of Xenon filled imitations that produce a pale incandescent color.

Rated at more than twice the life of other MR16s on the market today, Ultraline lamps are an astute choice for applications where frequency of lamp changes and cost of ownership are significant factors. The halogen capsule helps to protect ultraviolet sensitive objects by eliminating harmful UV emissions. Available in Spot, Narrow Flood, Flood and Wide Flood beam spreads. The Ultraline employs an axial filament that is computer aligned to attain precise 120, 240, 360 and 600 beam angles.

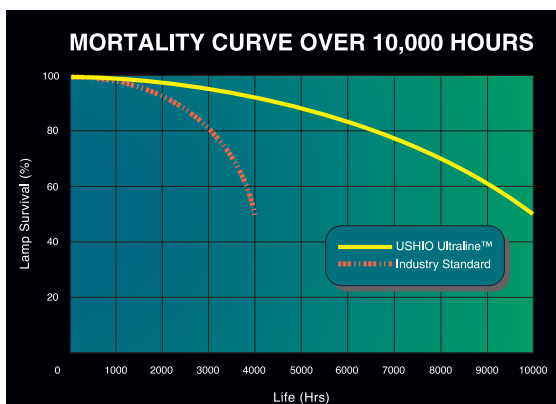

### FEATURES & BENEFITS

- 10,000 Hours Average Life - A Rated Lifetime of Over Twice the Life of the other MR16 Lamps Currently on the Market
- Minimizes the Amount of Maintenance Required to Support Retail, Commercial and Display Lighting Installations
- Halogen Capsule Cuts Harmful UV - Reduces the Amount of Material Wear From Harmful UV Radiation
- Advanced Titanium Oxide Coating - Consistent Color Throughout Lamp Life
- Crisp White Halogen Light
- High Color Temperature - 3100K
- Cool Beam Effect

### APPLICATIONS

- Museums and Galleries
- Retail Shops
- Offices
- Commercial Areas
- Hotel
- Restaurants
- Track Lighting
- Accent Lighting




Ultraline™ lamps are manufactured under ISO 9001 guidelines ensuring quality and security for the purchaser.

# SPECIFICATIONS



## LAMP SOCKET

The model C-33U socket is rated up to 24V-7A for use with all low voltage Ushio GU5.3 based MR16 lamps. The metal clips secure the lamp firmly into the socket. Use Ordering Code 1002142.

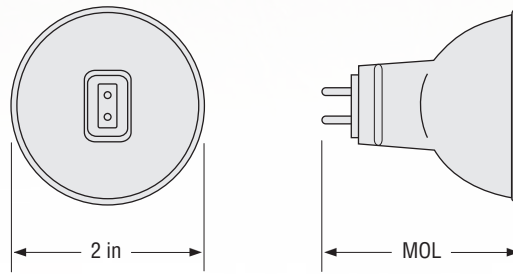

GU5.3 Base

Case Quantity: 50

Watts (W)	Ordering Code	Lamp Description	Volts (V)	MOL (in)	Color Temp (K)	Beam Angle	Beam Spread	CBCP (cd)	Burn Position	Avg Rated Life (h)
20	1003412	BAB/FG/ULTRA	12	1.78	3000	36°	Flood	450	Universal	10000

All dimensions shown in inches unless otherwise noted.

Not compliant with California Title 20.  
Discontinued - For Reference Only

## Photometrics

Item 1003412			Item 1002236			Item 1003342		
ø(ft)	H(ft)	E(fc)	ø(ft)	H(ft)	E(fc)	ø(ft)	H(ft)	E(fc)
2.13	3.3	41.81	1.41	3.3	157.93	3.77	3.3	37.16
4.26	6.6	10.50	2.79	6.6	39.48	7.58	6.6	9.29
6.40	9.8	4.65	4.20	9.8	17.56	11.35	9.8	4.09
8.53	13.1	2.32	5.58	13.1	9.85	15.15	13.1	2.32
36°		20W	24°		35W	60°		35W
BAB/ULTRA			FMV/ULTRA			FMW/ULTRA		

