



TWP Series LED Fixture

Traditional Wall Pack LED Light Fixture

Ushio America's TWP series traditional wall pack LED light fixtures are manufactured with premium, long-life LEDs, cast-aluminum housings with shatter resistant glass and excellent thermal dynamics.

The TWP series is designed using the traditional wall pack appearance and replaces much higher wattage HID luminaires, saving up to 80% on energy costs. The traditional shape maintains an aesthetic appearance and will replace any building's wall pack, or perimeter lighting.

The TWP light fixture is DLC® qualified and ideal for outdoor applications such as parking areas, loading areas, carports, driveways and pathways. These are designed for wall mounting above four feet from ground.

All TWP series fixtures operate on universal voltage (100-277V) with popular color temperatures (5000K and 4000K). Available in 42W and 60W, these LED fixtures come with Ushio's premium 5-year limited warranty.




FEATURES & BENEFITS

- Energy Saving
- DLC Qualified
- IP65 Outdoor Rated
- Operating Temperature: -4° F to 120° F
- 15-30 Foot Height Performance
- Shatter Resistant Glass
- Dimmable (0-10V)
- Photocell Compatible
- Long Life: 50,000 Hours
- 5-Year Limited Warranty

APPLICATIONS

- Area Lighting
- Security Lighting
- Entryway Lighting
- Pathway Lighting

SPECIFICATIONS

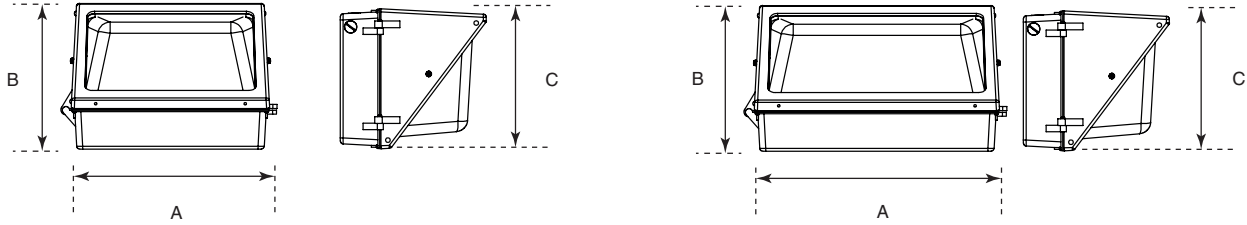

42W

60W

Wattage	A	B	C	Weight (lbs)
42	14.50 in	7.50 in	9.00 in	9.50
60	18.50 in	9.25 in	9.00 in	16.00


Watts (W)	Ordering Code	Description	Color Temp (K)	Lumens (lm)	Beam Type	CRI	Rated Life (h)	Finish
42	1004659	● ● ● 42TWP/40K/DB	4000	4,775	Full Throw	70	50,000	Dark Bronze
42	1004660	● ● ● 42TWP/50K/DB	5000	4,886	Full Throw	70	50,000	Dark Bronze
60	1004661	● ● ● 60TWP/40K/DB	4000	7,128	Full Throw	70	50,000	Dark Bronze
60	1004662	● ● ● 60TWP/50K/DB	5000	7,179	Full Throw	70	50,000	Dark Bronze

● IP65 ● DLC ● Title 24

Accessories (Sold Separately)

Cut Off Shield

- 1004736 = CVR-TWP40/DB
(Full Cut Off Shield for 40W & 42W TWP).
- 1004737 = CVR-TWP60/DB
(Full Cut Off Shield for 59W, 60W, 80W & 90W TWP).

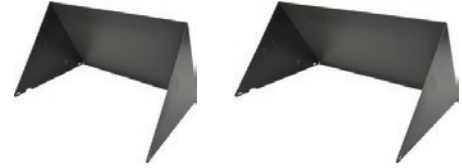


Photocell

- 1004707 = SEN-PHO-BT-MT/MV
(Button Photocell 120-277V).




Lens

- 1004738 = LENS-28TWP
(Glass Lens with Gasket for 28W TWP).
- 1004739 = LENS-40TWP
(Glass Lens with Gasket for 40W & 42W TWP).
- 1004740 = LENS-60TWP
(Glass Lens with Gasket for 59W, 60W, 80W & 90W TWP).

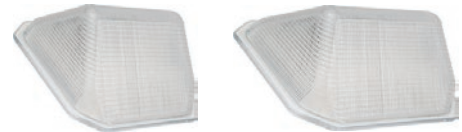


PHOTOMETRICS CHART

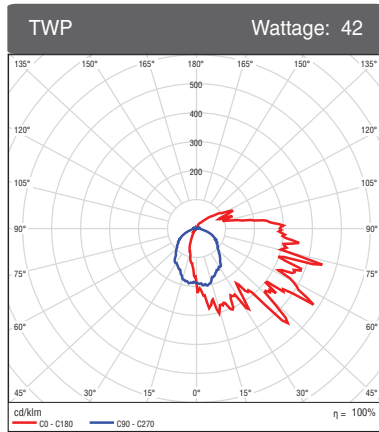

Zonal Lumen Summary

Zone	Lumens	Luminaire
0-30	713.62	15.00%
0-40	1152.94	24.20%
0-60	2254.43	47.20%
60-80	1183.71	24.80%
70-80	571.39	12.00%
90-120	662.15	13.90%
90-180	835.43	17.50%
0-180	4771.71	100.00%

Total Luminaire Efficiency = 100.00%

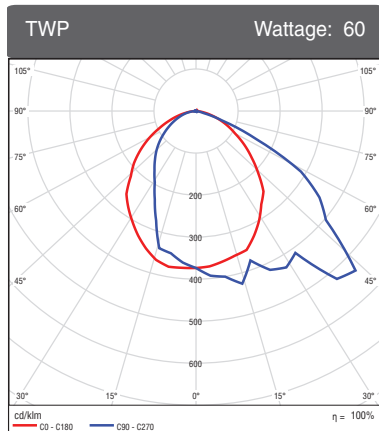

Zonal Lumen Summary

Zone	Lumens	Luminaire
0-30	1064.78	14.90%
0-40	1739.05	24.30%
0-60	3342.91	46.80%
60-80	1715.37	24.00%
70-80	819.34	11.50%
90-120	1040.1	14.50%
90-180	1371.32	19.20%
0-180	7150.25	100.00%

Total Luminaire Efficiency = 100.00%