




Utopia™ LED JC

LED JC Lamps for Landscape Lighting

The Utopia™ LED JC lamps offer a warm-white, omni-directional and long-life LED replacement for popular 20W small JC halogen lamps. These lamps feature a high-power LED light source with a remote phosphor lens that provides exceptional omni-directional light in a small form factor. With a life rating of 50,000 hours, these LED JC lamps will last up to 25 times longer than similar halogen lamps, all while saving 85% in energy costs. These durable lamps are water-resistant and can withstand shock & vibration.

Utopia LED JC lamps operate on 12V with Warm White (3000K) color temperatures. They are available with a BA15s bayonet base or a G4 bi-pin base. These LED JC lamps are not dimmable and should be operated on a magnetic transformer (12V AC or DC).

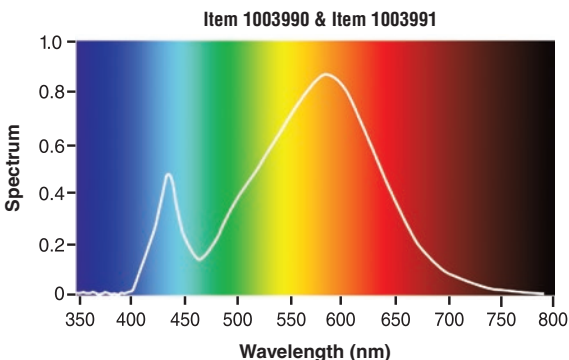


FEATURES & BENEFITS


- Energy Saving
- Omni-Directional Lighting
- Remote Phosphor Technology
- Water Resistant for Outdoor Fixtures
- Durable Construction: Withstands Shock and Vibration
- Long Life: 50,000 Hours
- Application Friendly: UV Free and IR Free
- Environmentally Friendly: Mercury Free, Lead Free and RoHS Compliant
- 5-Year Warranty

APPLICATIONS

- Pendant Fixtures
- Landscape Fixtures
- Step Lights
- Decorative Sconce Lights
- Under-Cabinet and Under-Counter
- Task Lighting
- Display Lighting
- Accent Lighting
- RV and Camper Lighting

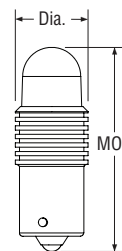

BA15s

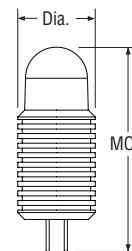

G4

Watts	Ordering Code	Lamp Description	Volts (V)	Dimensions		Lumens* (lm)	Color Temp (K)	CRI	Avg* Life (h)
				Dia (in)	MOL (in)				
2.5	1003990	Utopia LED JC, WW30, BA15s	12	0.69	1.90	160	3000	80+	50,000
2.5	1003991	Utopia LED JC, WW30, G4	12	0.69	1.90	160	3000	80+	50,000

* Average life based on 70% lumen maintenance.

Discontinued - For Reference Only